




RHINO-RACK

Rhino-Rack SUNSEEKER 2.5m Mesh Room (32108)

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Layout

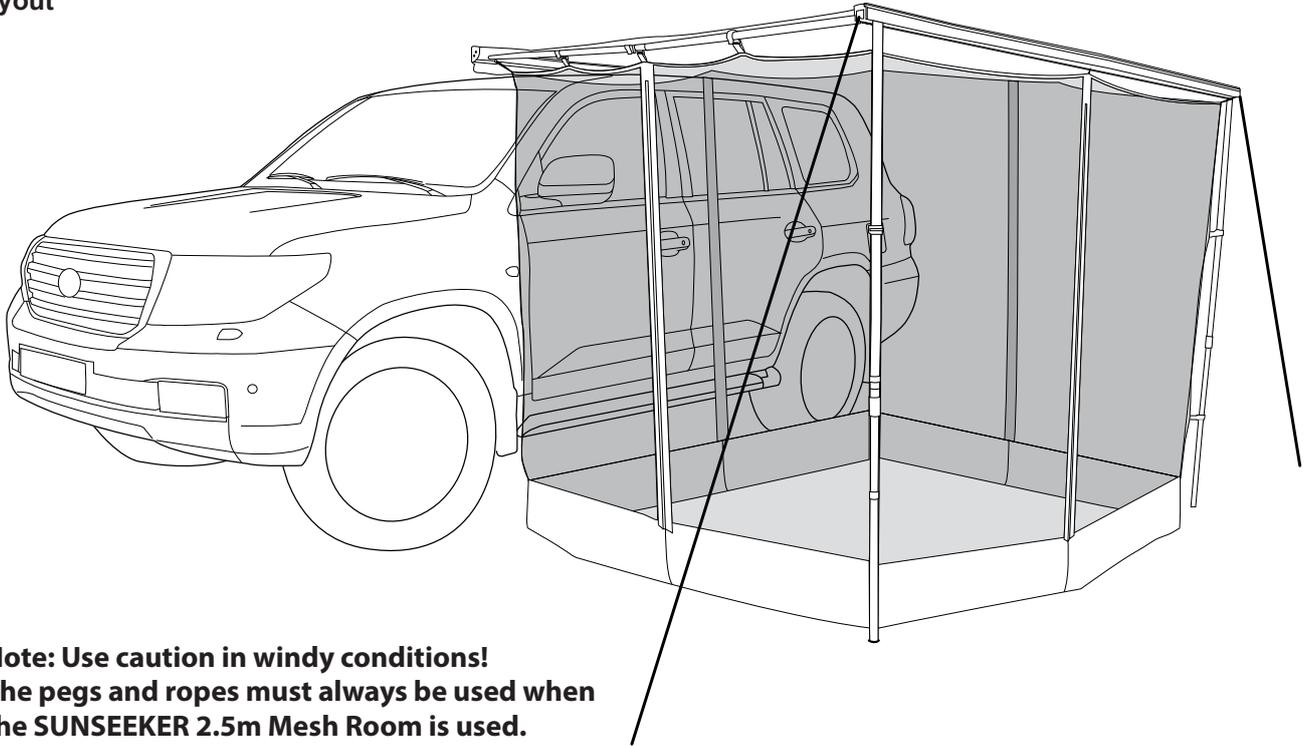

**Note: Use caution in windy conditions!
The pegs and ropes must always be used when
the SUNSEEKER 2.5m Mesh Room is used.**

The SUNSEEKER 2.5m Mesh Room is to be used in conjunction with SUNSEEKER II 2.5m awnings (32105). Holes may need to be drilled on these models.

Important Information

Recommendations

It is essential that all bolt connections be checked after driving a short distance when you first install your Rhino SUNSEEKER II Awning. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof bars each time they are refitted. **Use only non-stretch fastening ropes or straps.**

Please remove SUNSEEKER II Awning and crossbars when putting vehicle through an automatic car wash.

Load Ratings

With the addition of the SUNSEEKER II Awning, the load capacity of your crossbars will have to be adjusted accordingly. The SUNSEEKER II Awning and 2 crossbars weigh approximately 15kg.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: R180
Prepared By: Kayle Everett
Authorised By: Chris Murty

Issue No: 01
Issue Date: 09/04/2015

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



Rhino-Rack SUNSEEKER 2.5m Mesh Room (32108)

Parts List



Item	Component Name	Qty
1	Mosquito Room	1
2	Bag	1
3	Fitting Instruction	1

Care Instruction:

Wash and clean vehicle roof racks prior to fitment

Tools Required:


Tape measure, Power drill, 8mm drill bit

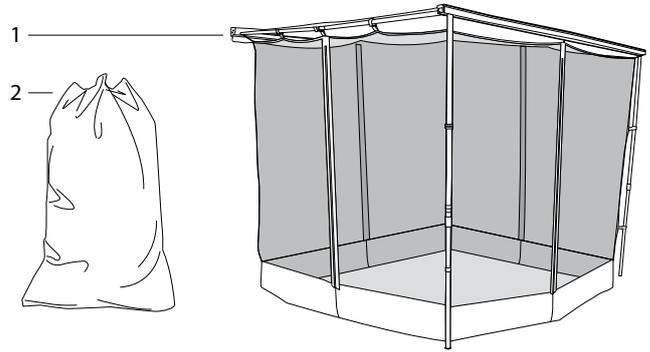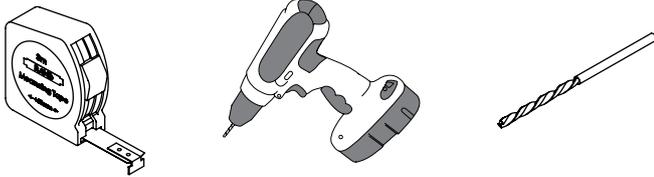


NOTE: Sunseeker Awning sold SEPERATELY

Instructions

01 Set up the SUNSEEKER awning as per instructions

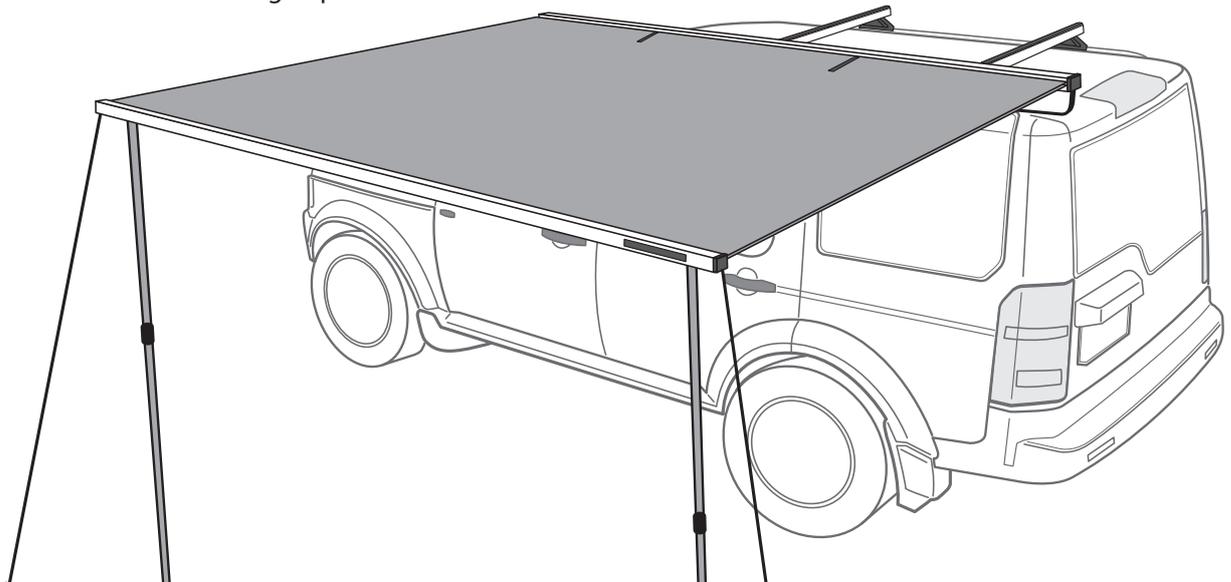

02 How to identify the orientation of the mesh room

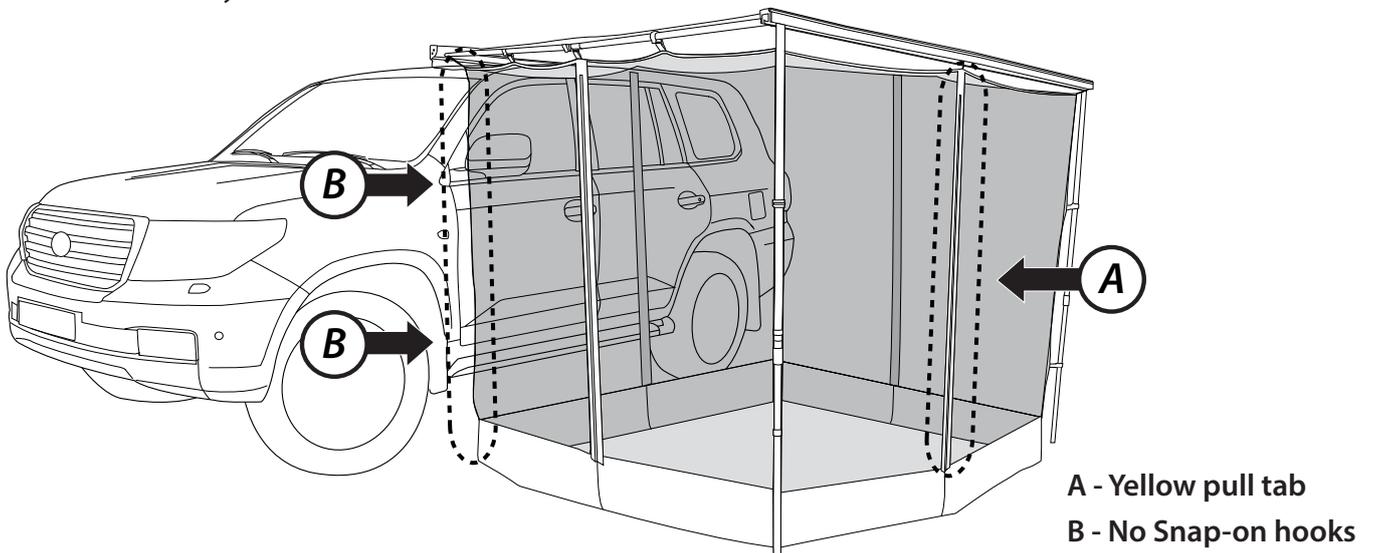





Rhino-Rack SUNSEEKER 2.5m Mesh Room (32108)

If you have an updated SUNSEEKER II, proceed to step 05 on the next page

03 Drill a 8mm hole through the section as shown. DO NOT drill all the way through both wall sections.

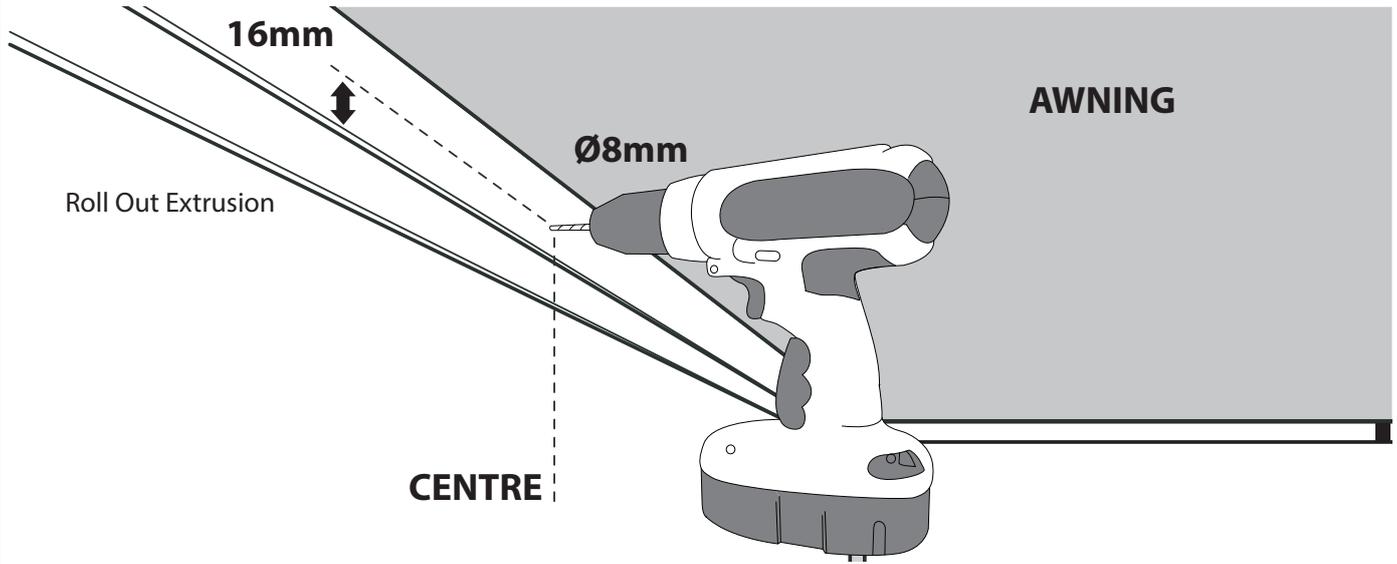



04 Drill 3 x 8mm holes from the bottom as shown. DO NOT drill all the way through both wall sections.

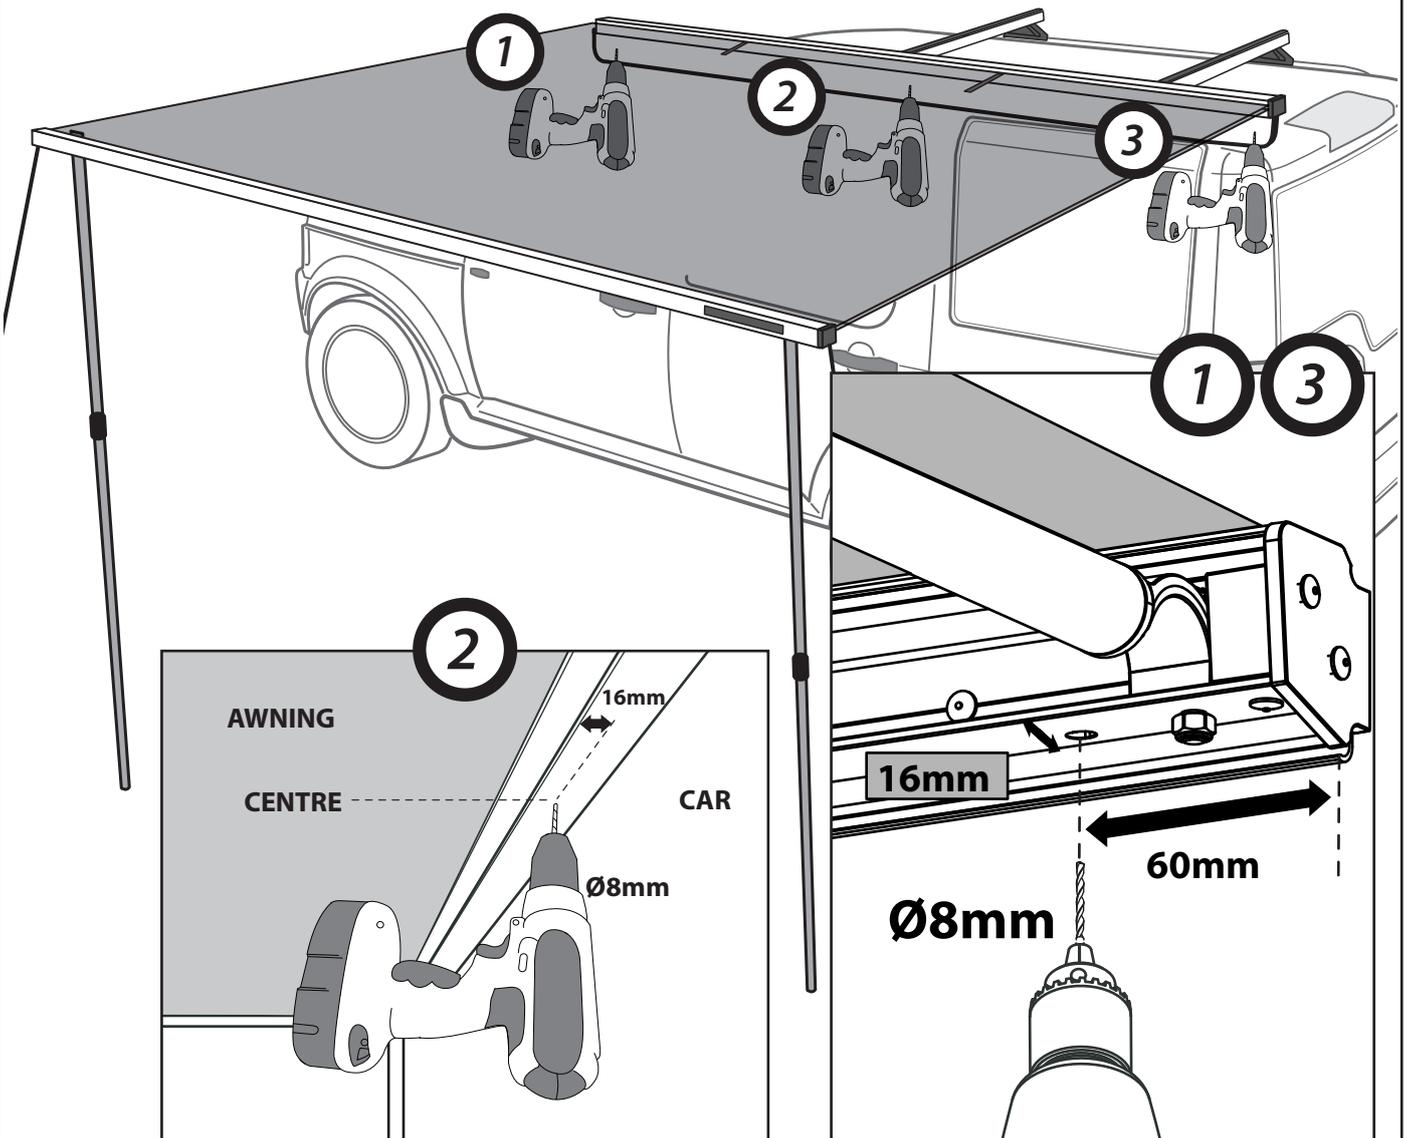





Rhino-Rack SUNSEEKER 2.5m Mesh Room (32108)

05

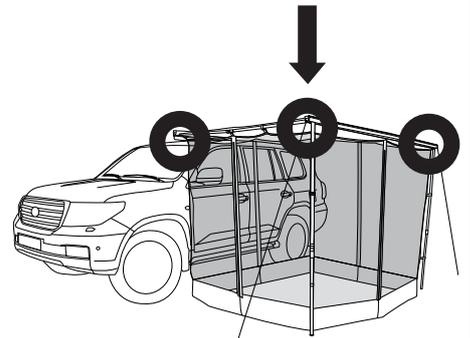
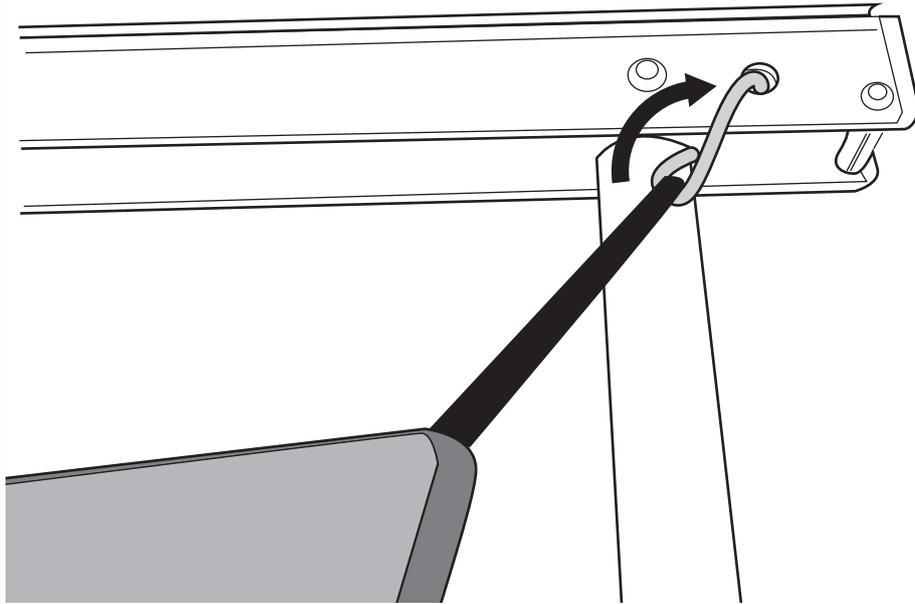


Applies to the 4 corners

06

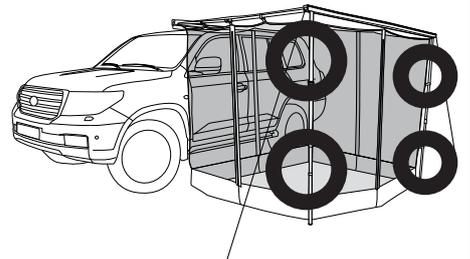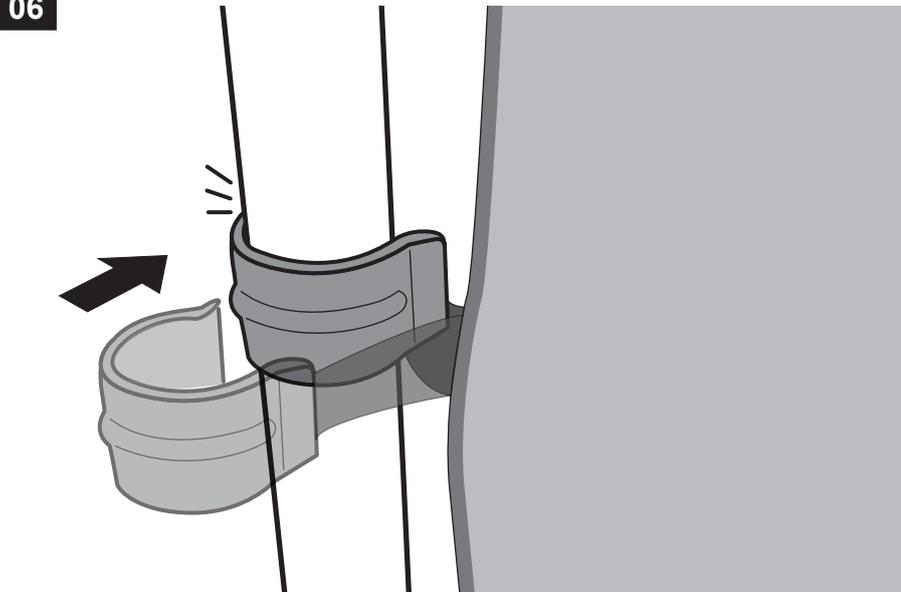

07

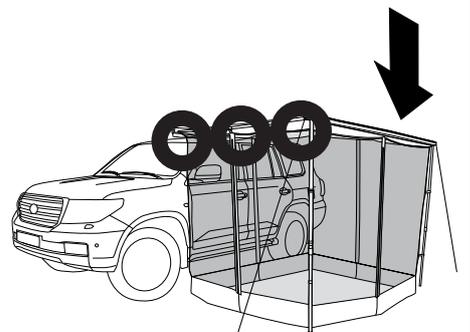
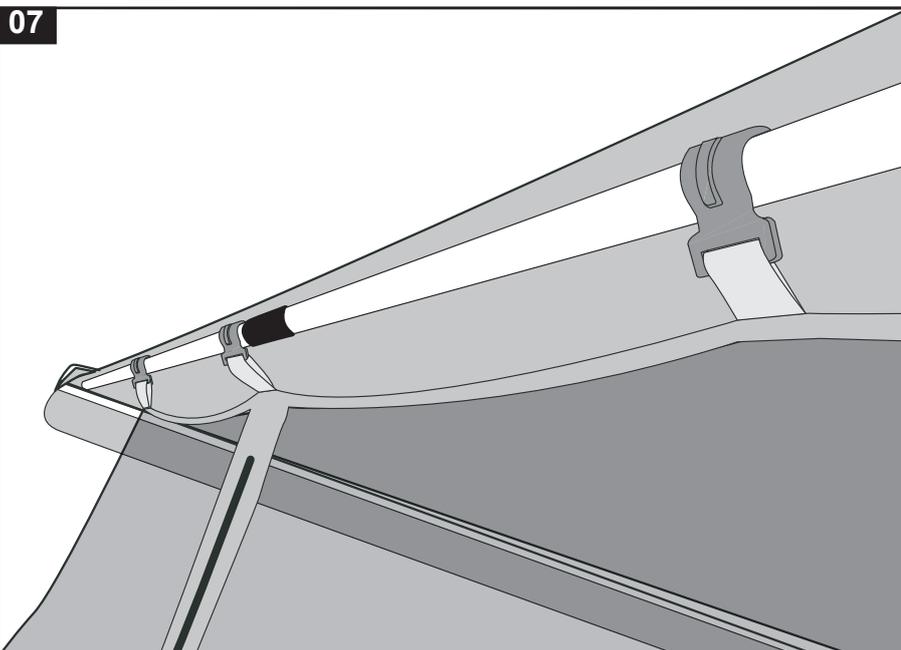


Applies to the opposite side too





Rhino-Rack SUNSEEKER 2.5m Mesh Room (32108)


08 Insert hook as shown (refer to diagram on the right for reference to mosquito room position)

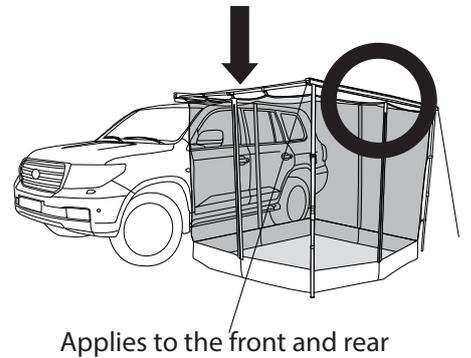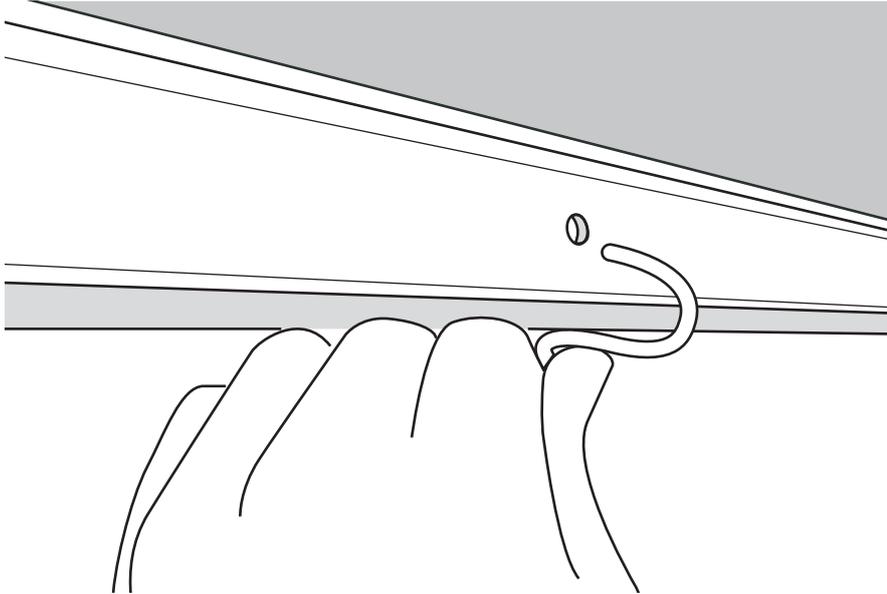

09 You can insert a peg through the metal hoop to secure the mosquito room in place (peg not supplied) or hook the ring under the spike in the leg

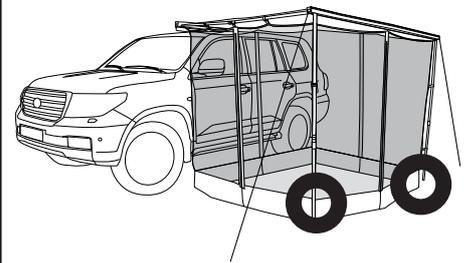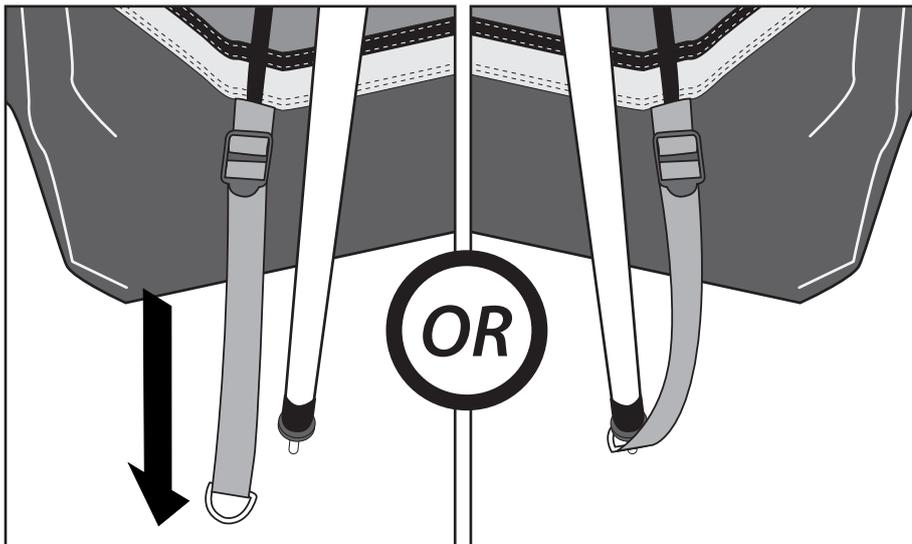

10 Overlap flaps at the bottom

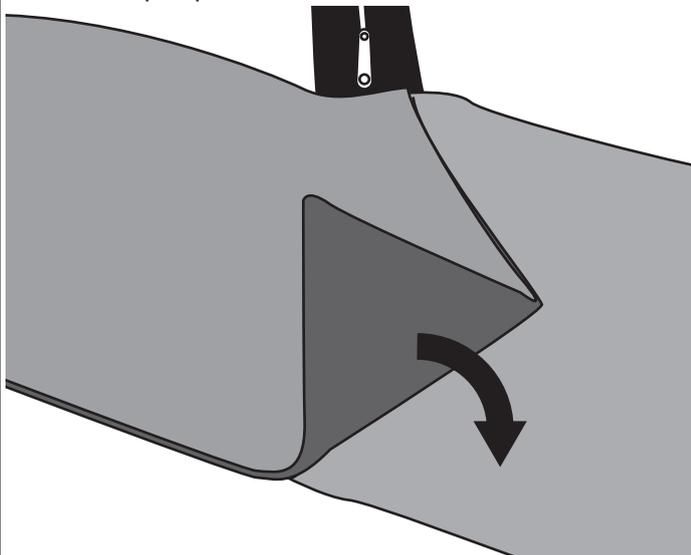

11 Overlap the corner ends as shown

